



Тумба ТВ 03 Гранада

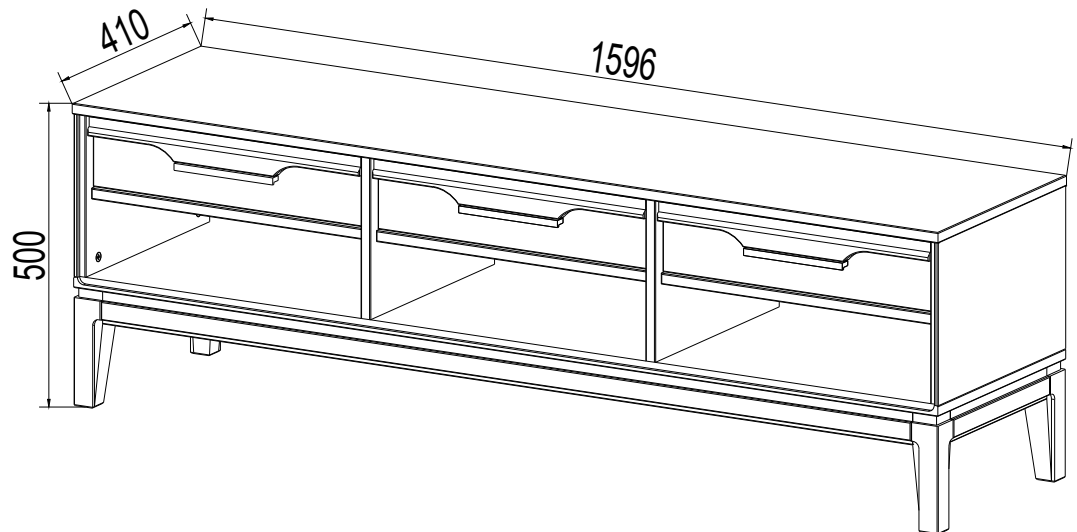


Прежде чем приступить к сборке, ознакомьтесь с памяткой на обороте



- | | | | |
|-----------|------------------------------------|-----------|--------------------------------|
| D | Montageanleitung | GB | Assembly instructions |
| FR | Notice de montage | IT | Istruzioni di montaggio |
| NL | Handlieding voor de montage | PL | Instrukcja montażu |
| CZ | Montážní návod | SK | Návod na montáž |
| HU | Szerelési útmutató | RO | Instrukțiuni de montaj |
| TR | Montaj talimatı | RU | Инструкция по монтажу |

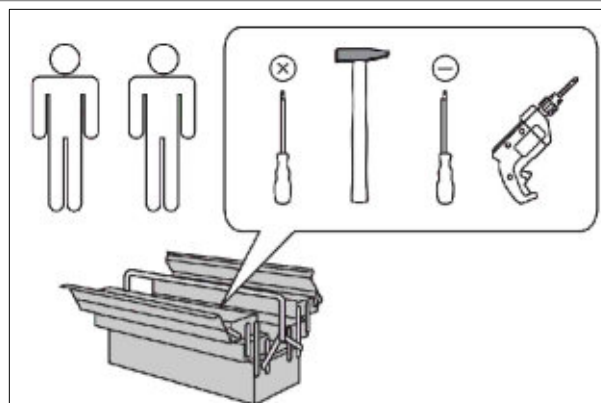


0
10
20
30
40
50
60
70
80
90
100
110
120
130
140
150
160
170
180


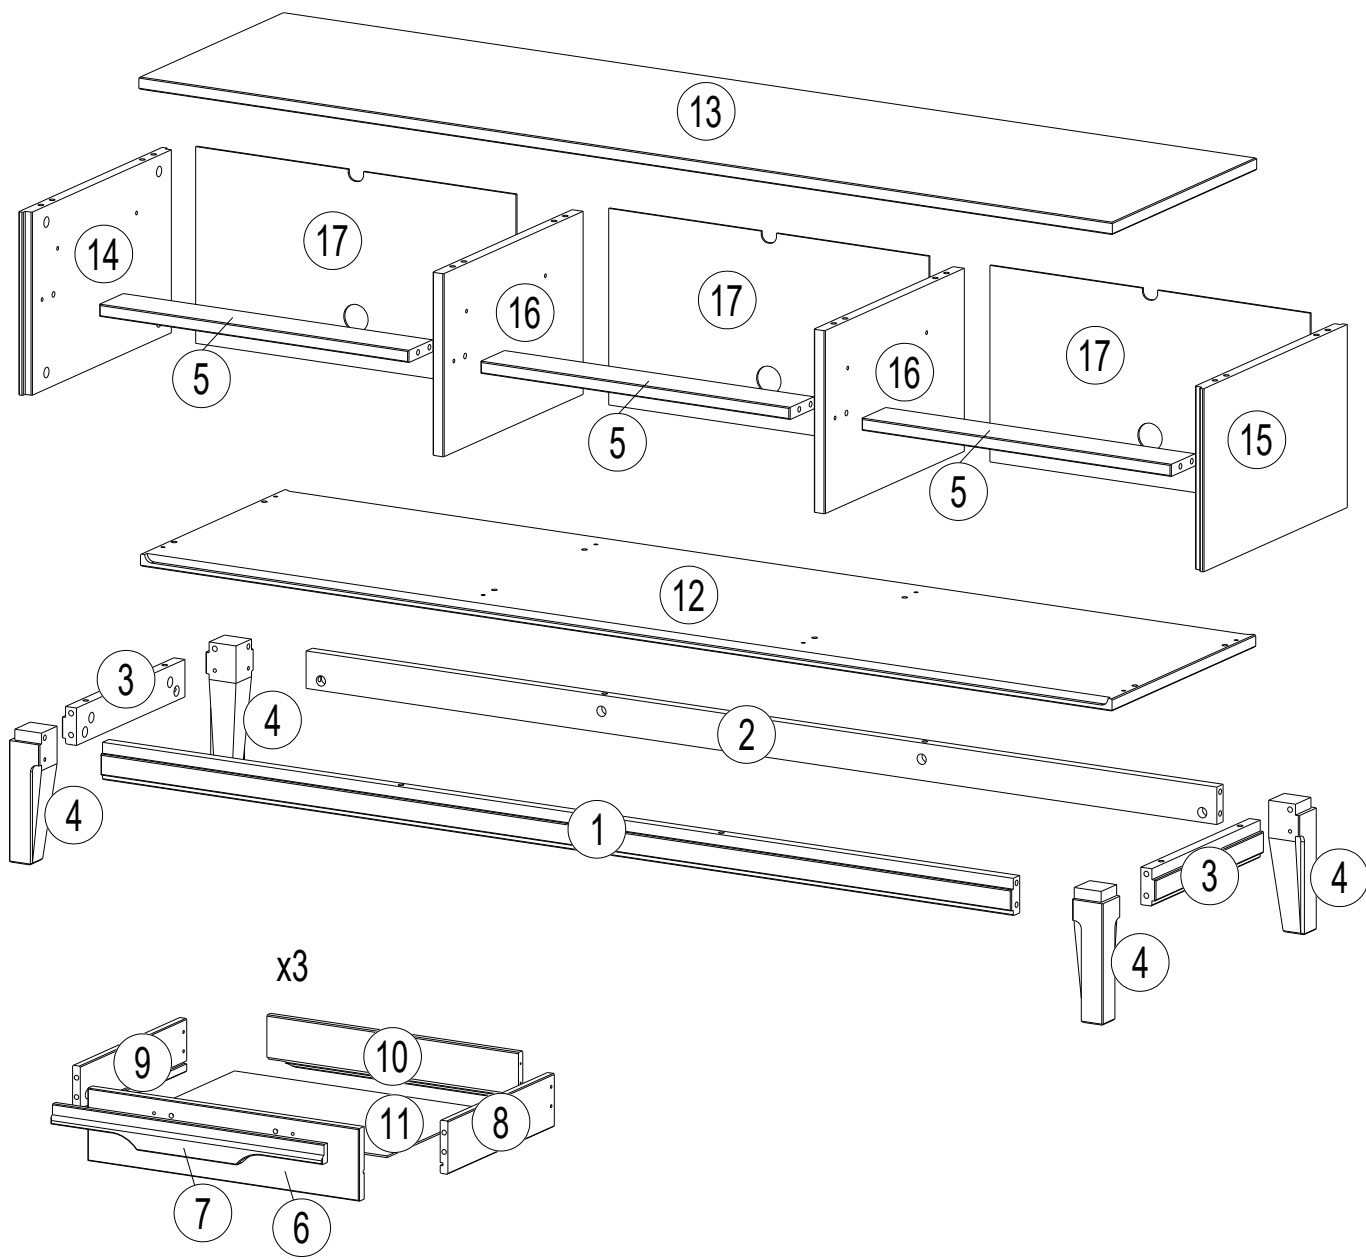


A 030093 x44	B 030110 x44	C 230010 8x32 x36	D 230011 8x20 x6	E 210140 x3	F 030052 M4x22 x6
G 250024 3,5x35 x12	H 070017 30x30 x4	J 030014 x12	K 220043 1,2x20 x2	L 250012 3,5x15 x12	M 250021 3,5x30 x6
N (a) 160068 (b) x3	O (a) 160068 (b) x3	P 070032 070039 x8			
Z1 090004 8x40 x2	Z2 180080 76x31x15 x2	Z3 250012 3,5x15 x2	Z4 250044 4x40 x2		

- 2 B 030110 x8

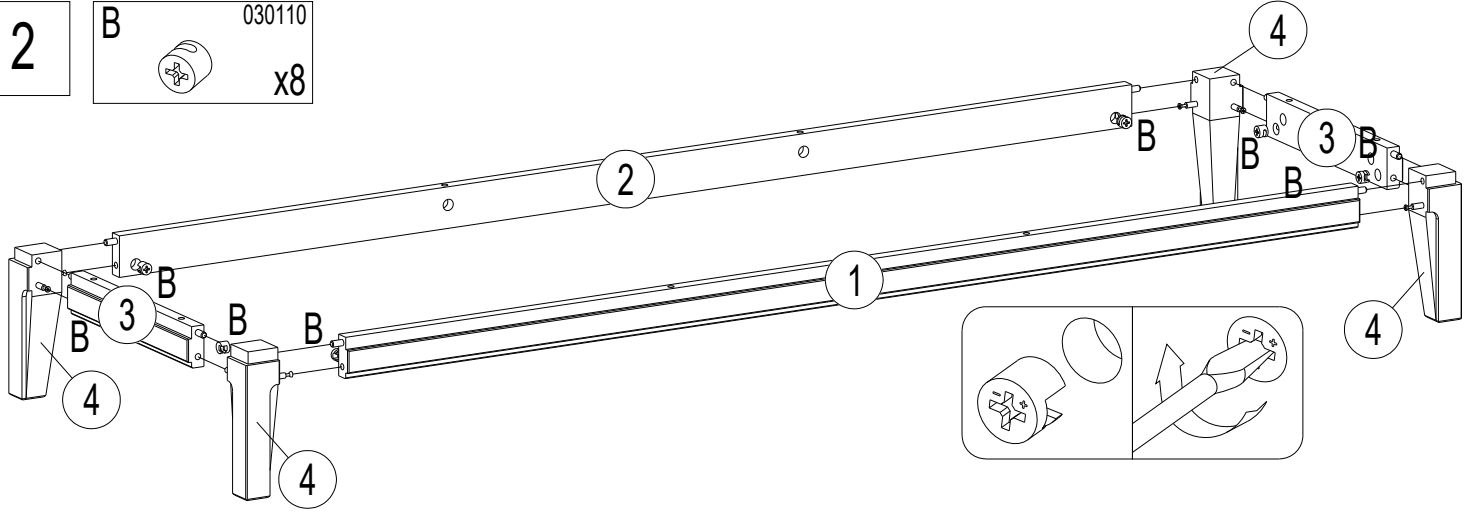


- 3 B 030110 x8
- H 070017 30x30 x4

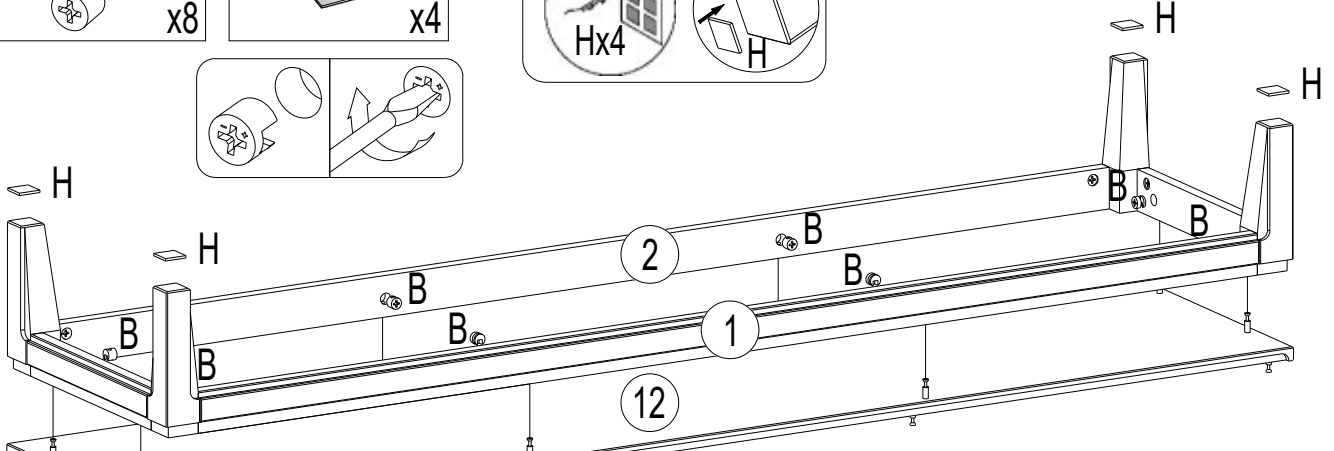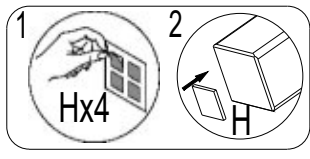



4

- A 030093 x6
- C 230010 8x32 x16
- J 030014 x12
- N (a) 160068 x3
- O (a) 160068 x3

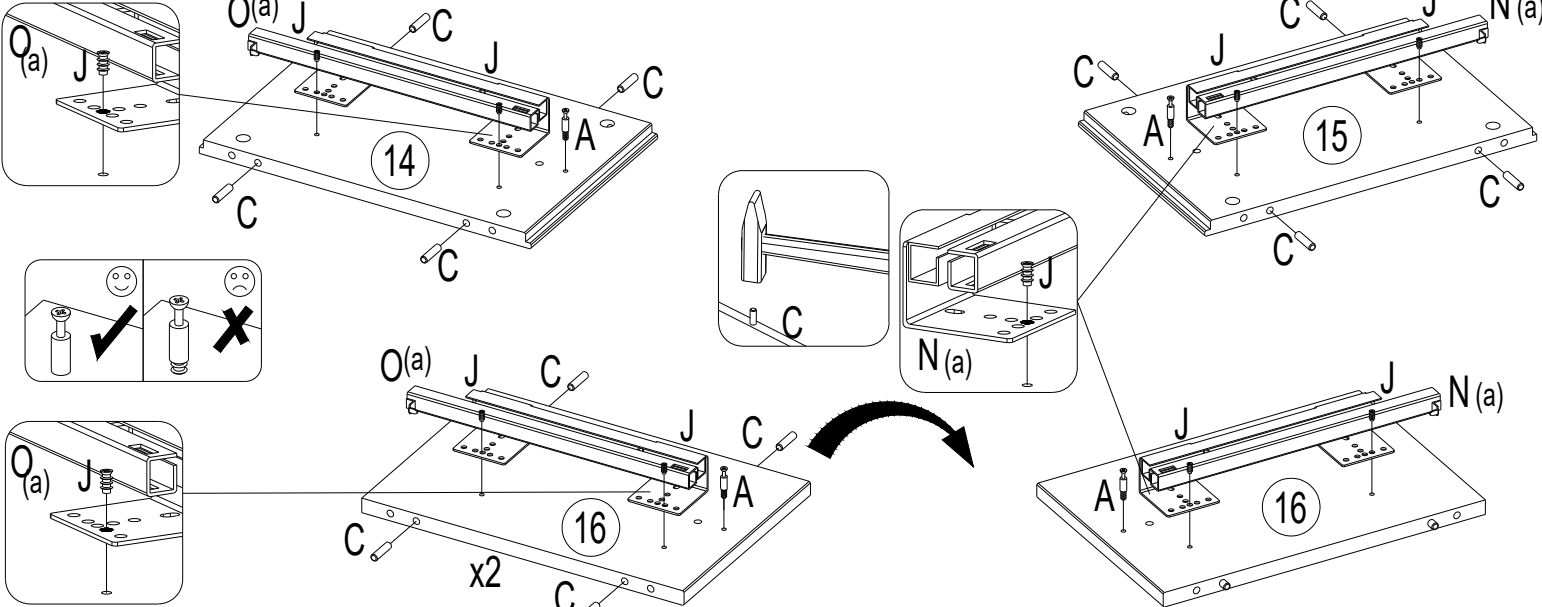



5

B 030110 x6

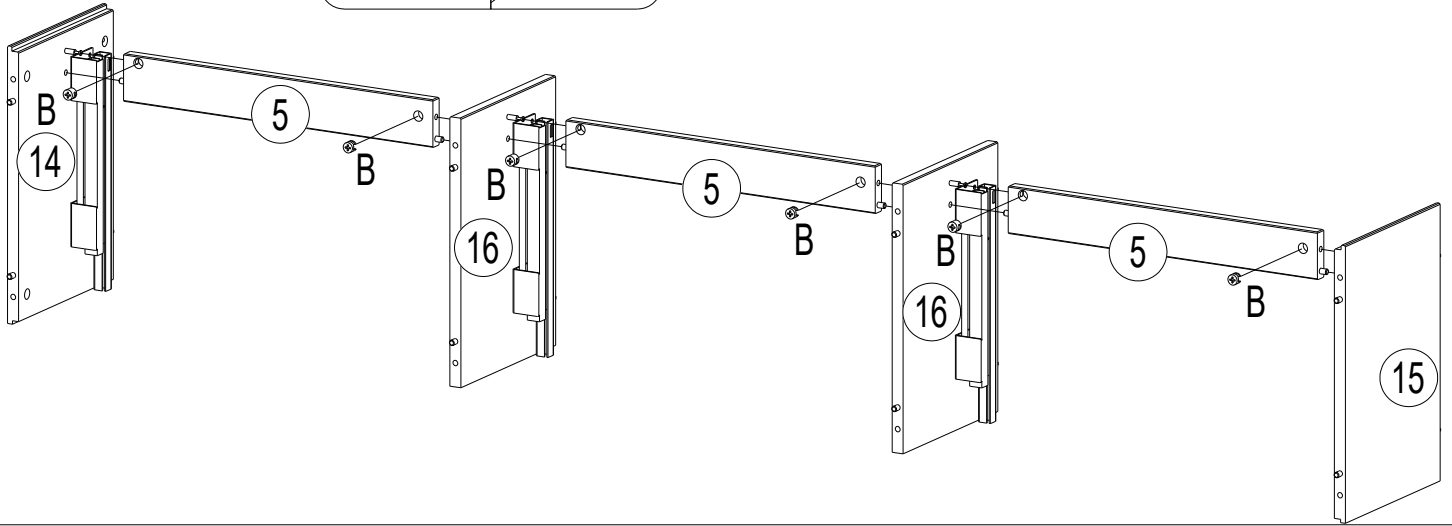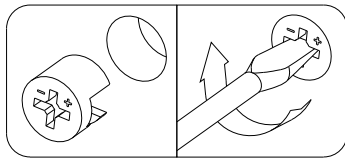



6

B 030110 x8

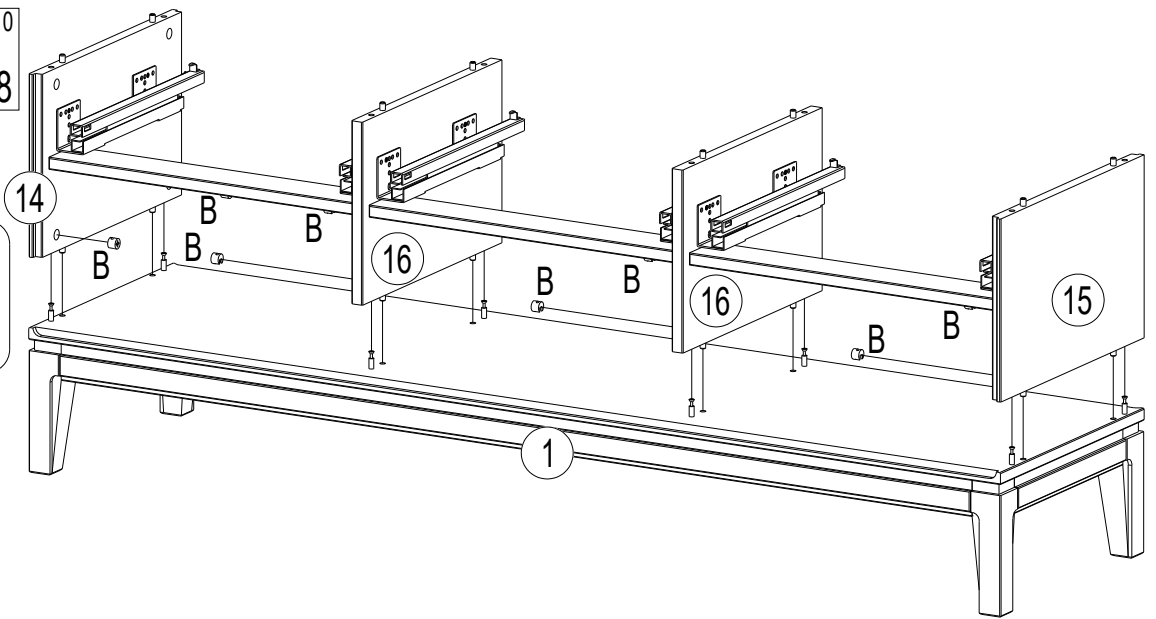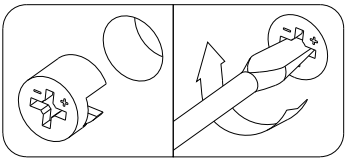



7

B 030110 x8

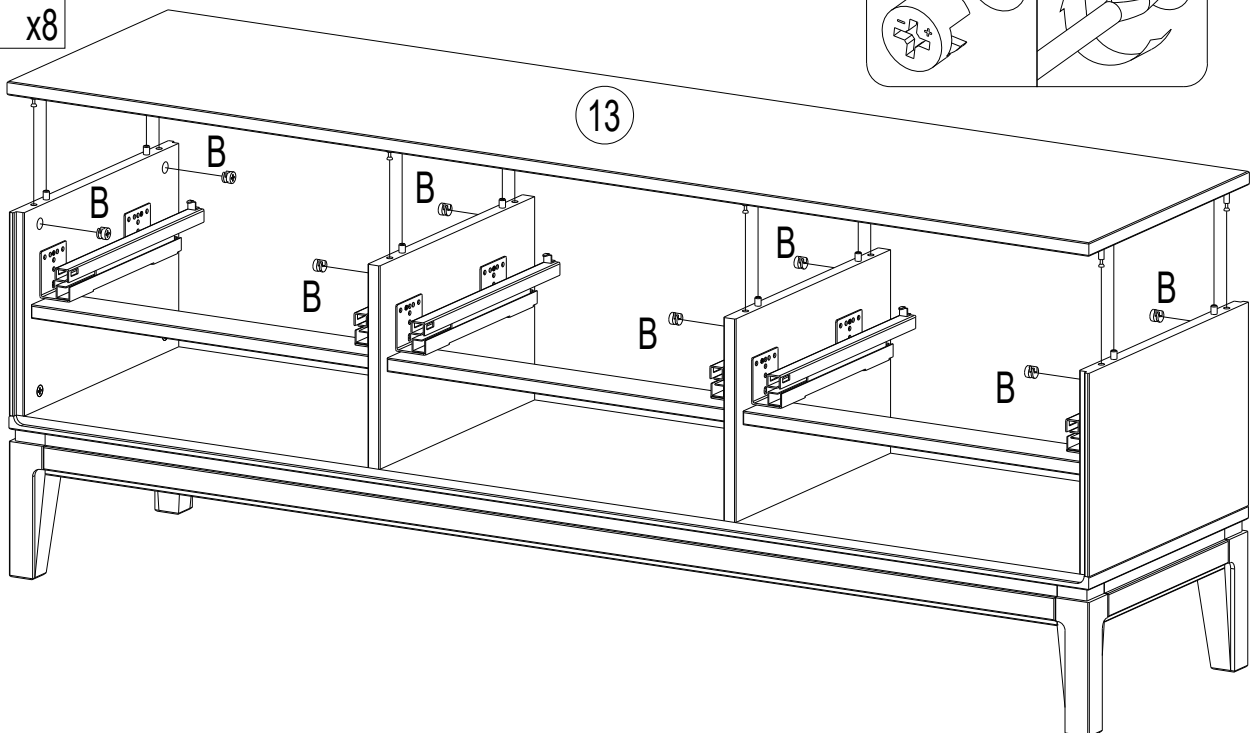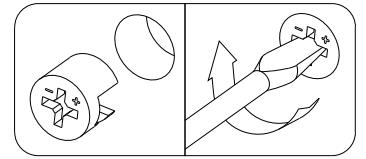

8

K 220043
1,2x20 x2

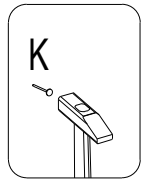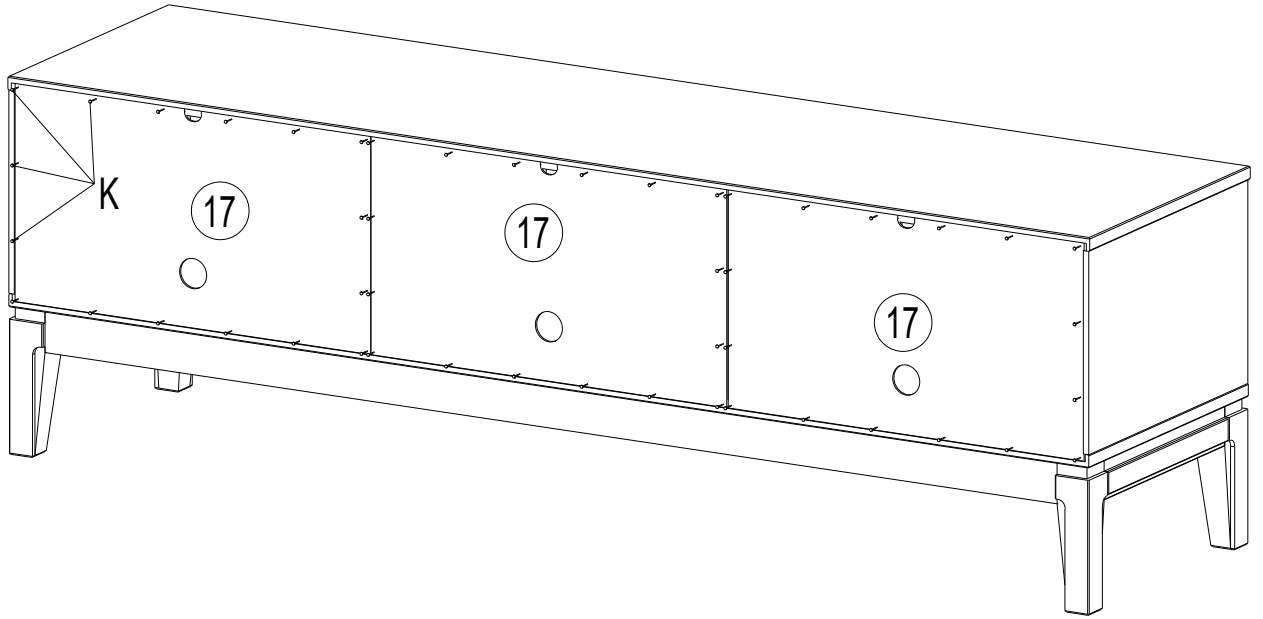

9

A 030093
x6

B 030110
x6

C 230010
8x32
x6

D 230011
8x20
x6

E 210140
x3

F 030052
M4x22
x6






L 250012
3,5x15
x12

M 250021
3,5x30
x6

G 250024
3,5x35
x12

N (b) 160068
x3

O (b) 160068
x3

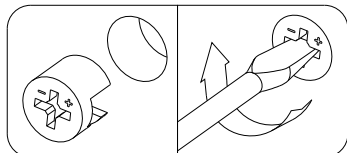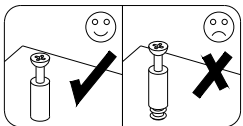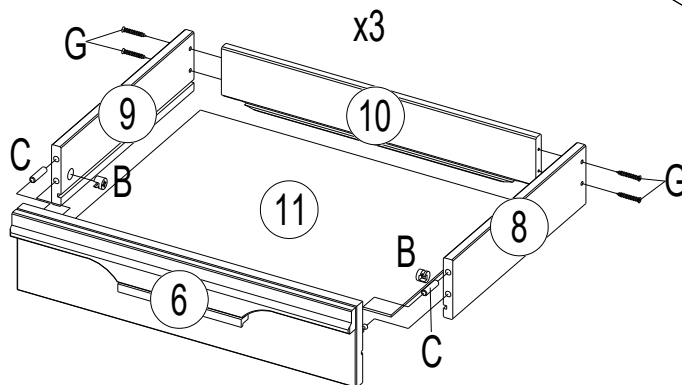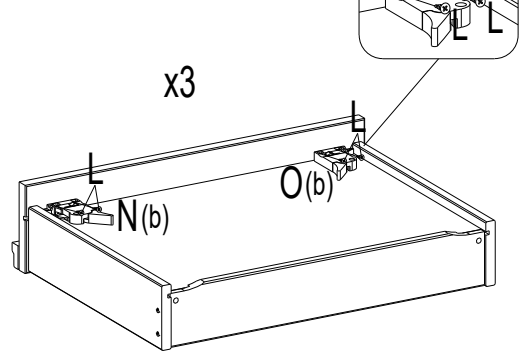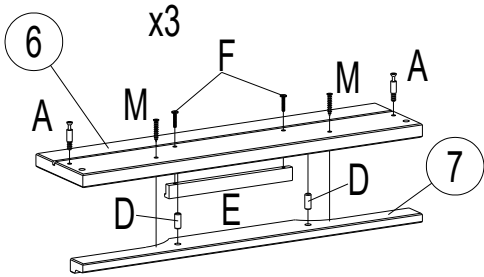

10



Z1 090004
8x40 x2

Z2 180080
76x31x15 x2

Z3 250012
3,5x15 x2

Z4 250044
4x40 x2

P 070032
070039
x8

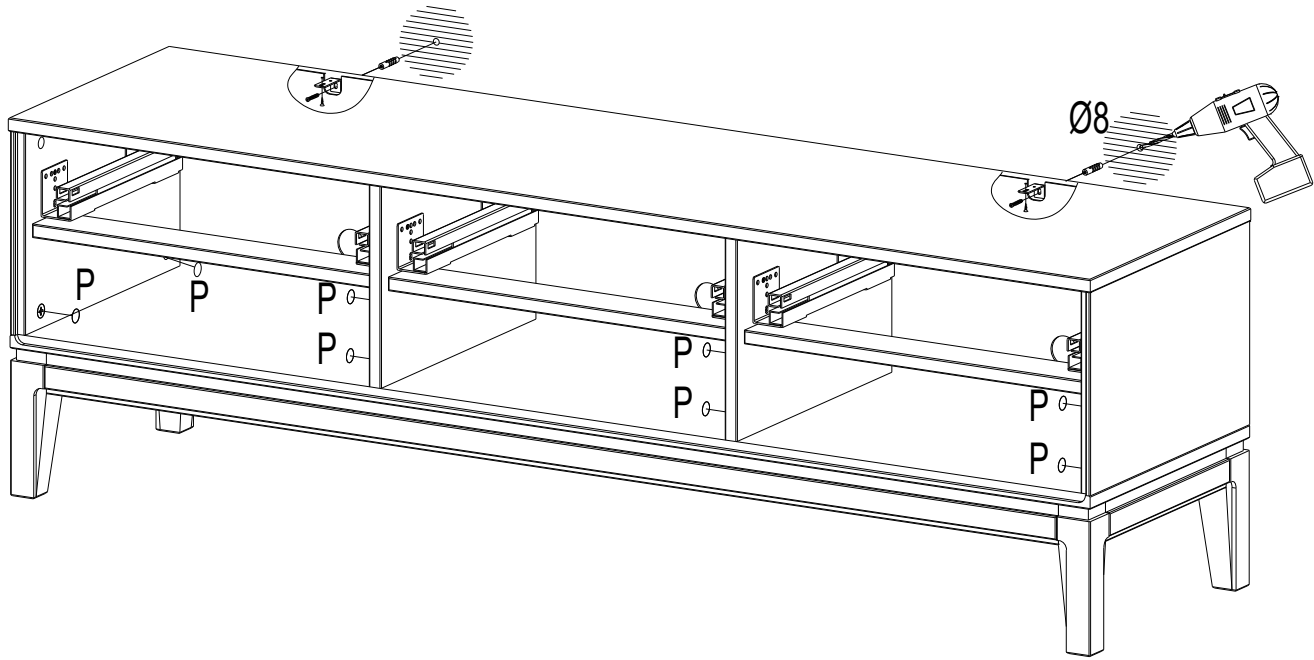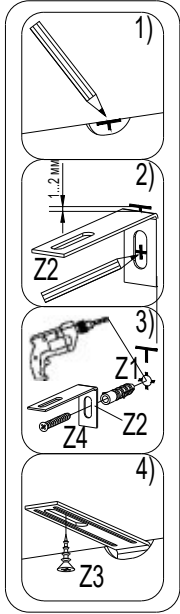

11

